


Rear panel and Volume for Justlong

component list:


- 1 Justlong rear panel
- 2 Easy Release mobile brackets
- 2 Easy release fixed brackets
- 8 M6 screws to fix the ER brackets
- 4 volume fixing brackets
- 4 fiberglass rods (L=46,50 cm)
- 1 Justlong volume
- 1 Justlong cover with 2x fiberglass rods L=59,50 cm

First, you need to mount the 2 Easy Release fixedbrackets on the Justlong tail, attaching them using the provided hardware. See picture.


mount the two mobile brackets on the accessory panel (either Slim Panel or Child Pack) using the included bolts. These brackets engage directly with the fixed supports.

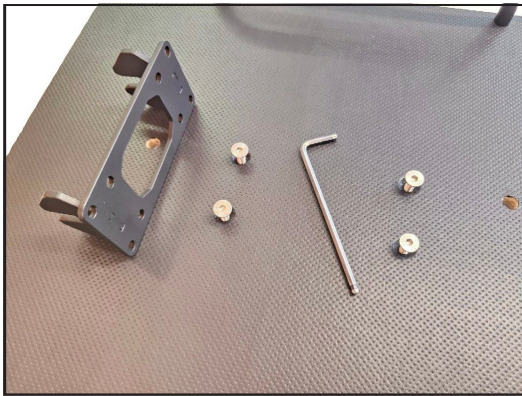



Mobile bracket fixed on the panel

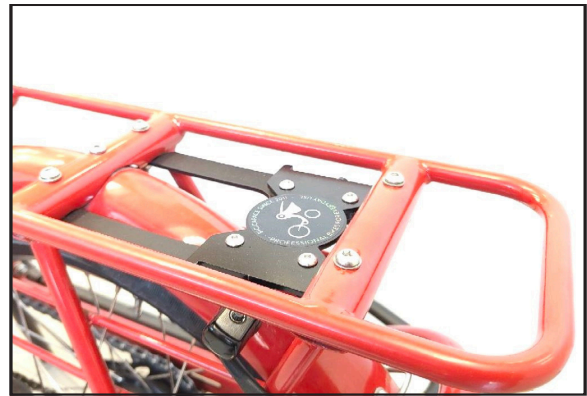

Fixed bracket mounted on the Justlong frame

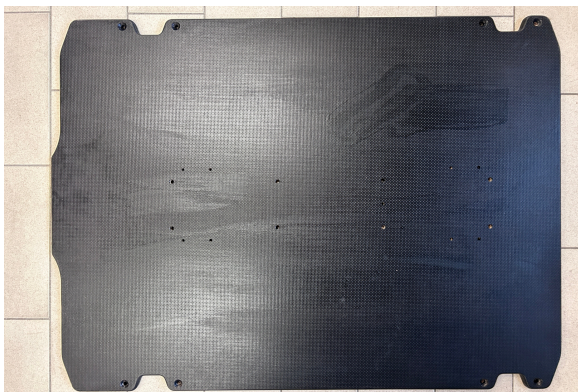

Position the four fibreglass rods in the bracket already attached to the panel and insert the upper arch into the ends of the rods. Note that the upper arch must be positioned with the short side of the arch towards the saddle. If wrongly mounted, the arch will touch the saddle, making subsequent mounting impossible.

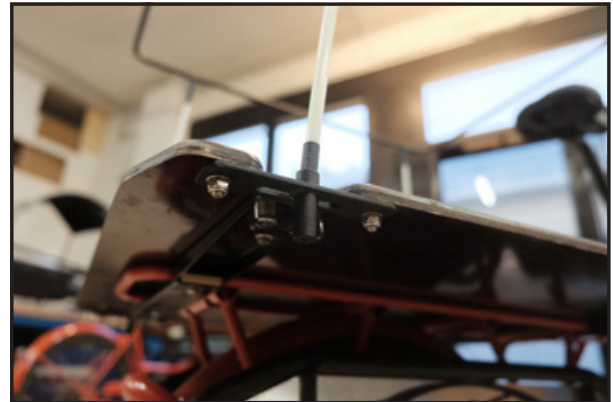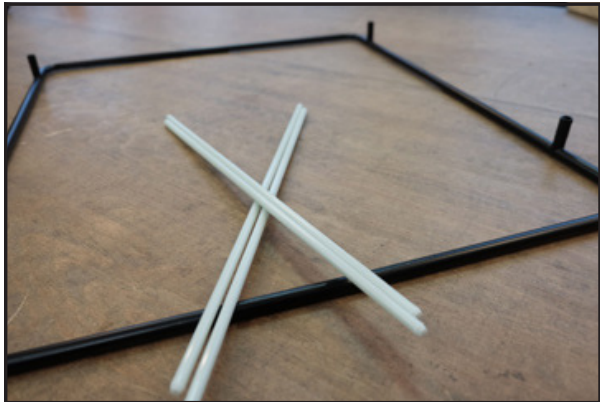

To mount the upper arch and fit it into the fibreglass rods, the latter must be slightly forced. In fact, the two sleeve constraints are not aligned with each other, giving stiffness to the structure. Then fit the volume over the newly mounted arch and use Velcro to secure it to the frame as shown in the figure.

Use the clips under the panel and tighten them to secure the volume and prevent accidental movement. Next, mount the cover and secure it using the clip provided.





The cover can be mounted in two ways, depending on the convenience and use required: opening towards the saddle or upside down. In both ways the cover can be secured by means of the cover clip.

